



JP1	Ignition Voltage selector	1-2 12v 2-3 5v	Default
JP2	Intake Air Temp Pull Up		If sensor use paralel with OEM ecu, jumper off
JP3	Coolant Pull Up		If sensor use paralel with OEM ecu, jumper off
JP4	Crank Signal Pull Up		use mostly with hall sensor like in 4G93,63 if install on full standalone wiring.
JP5	Cam Signal Pull Up		use mostly with hall sensor like in 4G93,63 if install on full standalone wiring.
JP6	Crank Shunt resistor		use with VR sensor only. Normally use on 60-2 oe 36-1 if missed trigger detected at high rpm
JP7	Cam Shunt Resistor		On VR sensor only, Rarely use